


1

Side Adjustment:

Turn front screw clockwise to increase door overlay, counter-clockwise to decrease overlay (Figure A).

Figure A

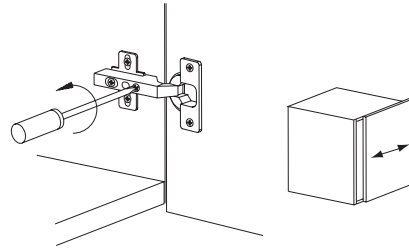


2

Depth Adjustment:

Loosen back screws. Adjust door to desired position and tighten screw (Figure B).

Figure B

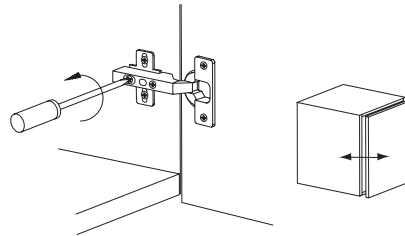


3

Height Adjustment:

Loosen screw(s) on the mounting plate. Adjust door to position and tighten screws (Figure C).

Figure C

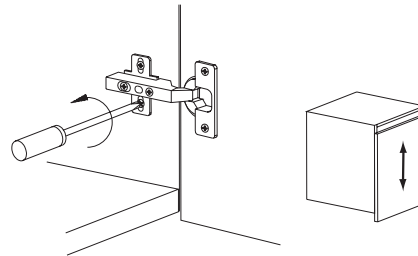


4

Door Removal and Installation:

To remove, pull release lever back (Figure D). To re-install, place the hinge on the mounting plate and push the rear of the hinge with finger pressure. The snap sound confirms a secure attachment.

Figure D

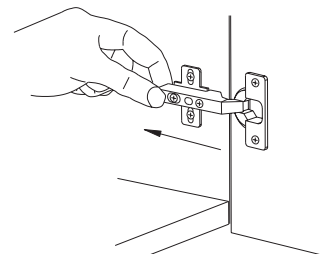

Assembly Instructions

Hinge Adjustment

Recommended Tools

- Phillips Screwdriver

NATIONAL

Furniture with Personality®

Telephone 800.482.1717

Fax 812.482.8800

www.nationalonline.com

Part #2034571

© 2007 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Care Teams.