


## Wood Cylinder Base

**1** The cylinder base mounts in the center of the underside of the table top.

**2** Measure in from four (4) points on the underside of the table top to find the center point. Attach base with provided screws through each hole in flange (Figure A). Tighten screws firmly, but do not over-tighten.

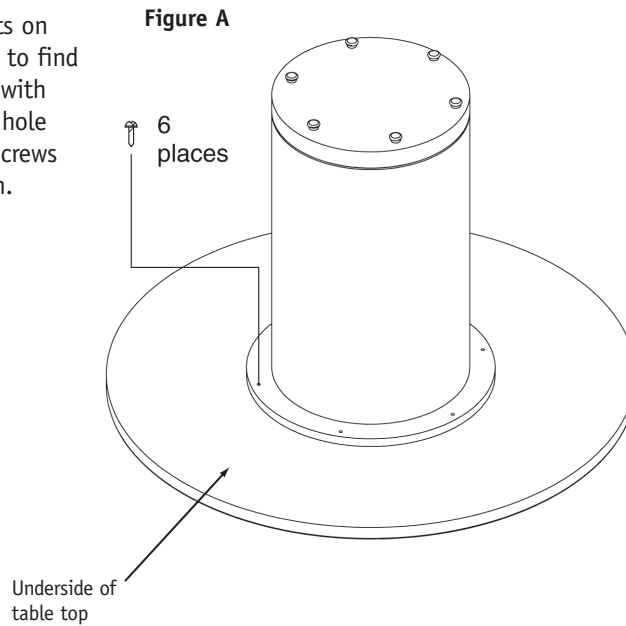

**3** Carefully turn the unit upright.

**4** Locate all the glides on the bottom of the base and turn fully "in" (clockwise). Extend each glide as necessary to level unit. Check adjustments by placing a level on the surface top.

## Recommended Tools

- Screw Gun
- Phillips Bit
- Tape Measure
- Pencil

## Package Contents

- #8x1 1/4" Panhead Screws

**NATIONAL**

Furniture with Personality®

Telephone 800.482.1717

Fax 812.482.8800

www.nationalonline.com

Part #2034583

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Care Teams.

© 2007 Kimball International, Inc.