


**CLEVER SERIES
Quick Fastener**

Recommended Tools
None

1

The main unit should be in its final position. Align the unit to be attached. The quick fasteners are on the underside of all joining worksurfaces (Figure A).


Figure A

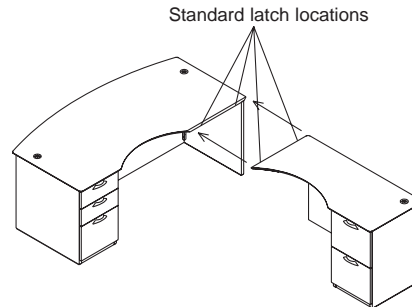

2

Quick fasteners are comprised of a male and female half (Figure B).


Figure B

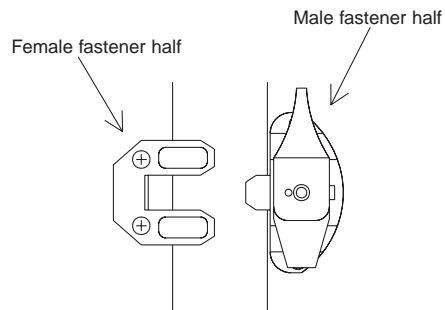

3

Slide both units together, making sure all quick fasteners fully engage and both worksurfaces are flush with no gaps (Figure C).


Figure C

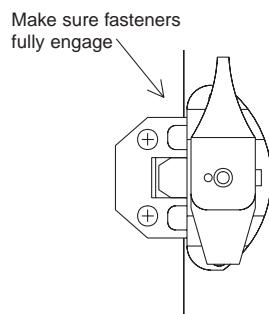

4

Rotate the clasp on the male half of one fastener, making sure it engages the flange on the female half (Figure D).

Figure D

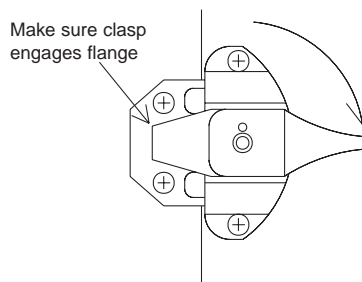

NATIONAL

Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.nationalonline.com

Form #NAICLQF
Part #1604891

Printed in U.S.A.
© 2002 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.


CASEGOODS

Assembly Instructions

CLEVER SERIES Quick Fastener

5 Continue to turn the clasp until it tightens securely (Figure E).

Figure E

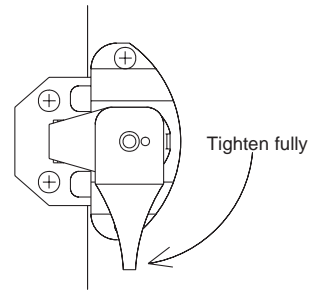

6 Repeat steps 4 and 5 to secure any other fasteners.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.