



**ESCALADE SERIES
Wall Mounted Storage**

NOTE: This instruction sheet describes the installation of overhead cabinets on a wall with wooden studs. Alternative mounting surfaces may include metal studs and masonry block when appropriate fasteners are used. Fasteners are not supplied in the package contents. **DO NOT** mount overhead cabinets where wall board or similar sheet materials will be the **ONLY** means of support.

1 Place overhead cabinet against wall in the approximate desired location. Mark the top edge of the overhead and set it aside. Measure down 5 27/32" from the top edge mark and draw a level line (Figure A).

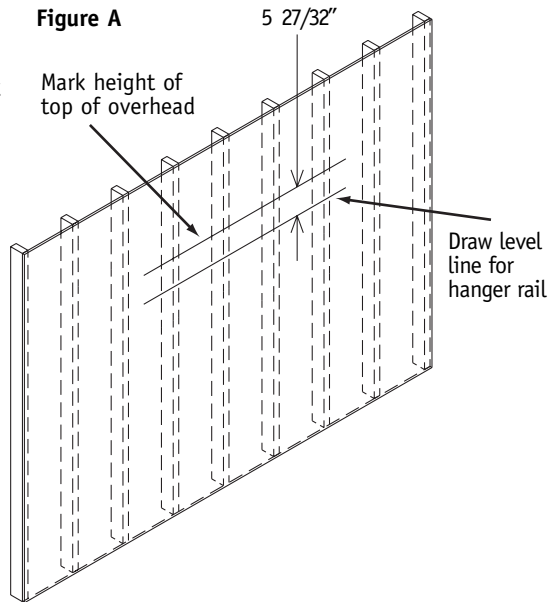

2 Place the hanger rail on the wall, centered in the approximate location of the overhead, with the bottom edge of the rail on the level line drawn in Step 1. Locate the centers of the wall studs and transfer these locations to the lower portion of the hanger rail (Figure B).

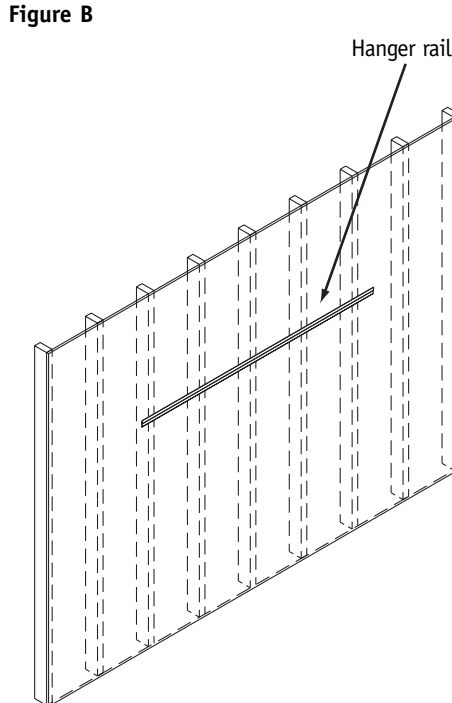

NOTE:
66" wall cabinets must attach to four studs
72" wall cabinets must attach to five studs

Recommended Tools

- Pencil
- Tape Measure
- Level
- Screw Gun
- Drill Bits
- Screw Bits

Package Contents	Qty.
• Hanger Rail	1

NATIONAL
Furniture with Personality™

Telephone 800.482.1717
Fax 812.482.8800
www.nationalonline.com

Form #NAIEWMS Ver. 04
Part #1560994

Printed in U.S.A.
© 2004 Kimball International, Inc.


Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.

ESCALADE SERIES
Wall Mounted Storage

3

Remove hanger rail from wall and bore holes through rail $\frac{3}{8}$ " above bottom edge of rail at locations marked in Step 2. Countersink each hole so that attaching screws will be flush (Figure C).


Figure C

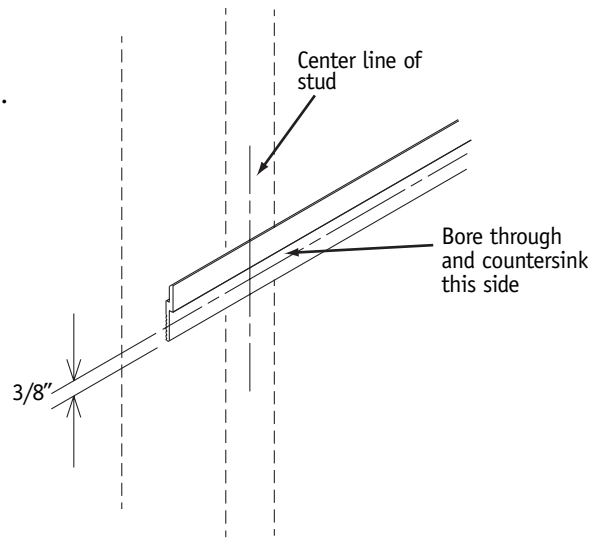

4

Attach hanger rail to wall aligning bottom edge of rail with level line drawn in Step 1. Make sure that each screw makes full, solid contact with each stud (Figure D).


Figure D

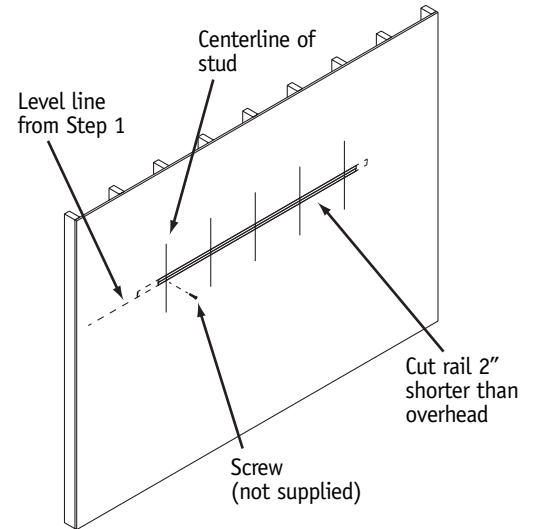

5

Place overhead cabinet flush against the wall so that the hanger brackets attached to the overhead are above the hanger rail and the hanger rail is between the end panels of the overhead. Carefully lower the overhead cabinet until the hanger brackets engage the hanger rail. Make sure the hanger brackets are firmly seated on the hanger rail (Figure E).

Figure E

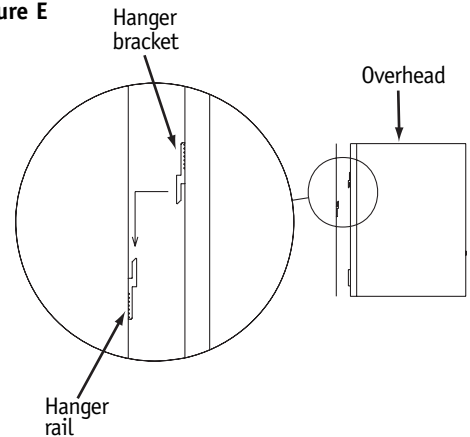

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.