

## Tackboards

### Recommended Tools

- Level
- Drill
- #2 Phillips Screw Bit
- Small Blade Screwdriver


### Screws Required

#8 x 5/8" Flat Head Screws

**1**

Tackboards can be attached to any highback organizer to provide a tackable surface. Tackboards can also be wall mounted. The tack panel is provided with routed channels on the back side to help manage cords.


**Figure A**

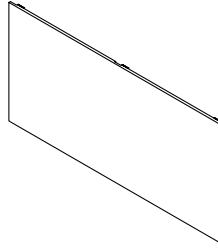

**2**

Insert a screw into the hole of each loose Dual Lock pad, 4 or 6, as required.


**Figure B**

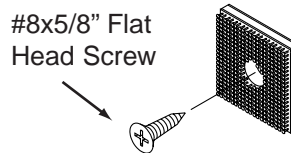

**3**

Press pads with screw protruding against the pads which are already mounted to the back of the tackboard, locking the pads together. Position tackboard on mounting surface, making sure it is level. Apply pressure on board over pads to mark surface with screw points.

**Figure C**

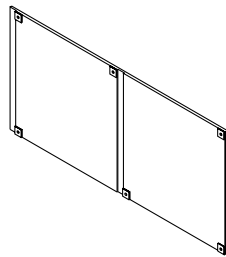

**4**

Carefully detach pads with small blade screwdriver and fasten in locations previously marked in step 3. Position tackboard against mounting surface, making sure it is level, and engage until each pair of pads snap together.

**5**

Wall mount caution: Pads should be located on wall studs, or secured to wall with anchors (not provided).

**NATIONAL**

Furniture with Personality™

Telephone 800.482.1717  
 Fax 812.482.8800  
[www.furniture.kimball.com/nof](http://www.furniture.kimball.com/nof)

Form #NAITAC-00  
 #1475779

Printed in U.S.A  
 © 2000 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Care Teams.