


## ASSEMBLY INSTRUCTIONS

1

These instructions provide the basic information to install a worksurface support panel or return support panel onto an WaveWorks worksurface (Figure A).


Figure A

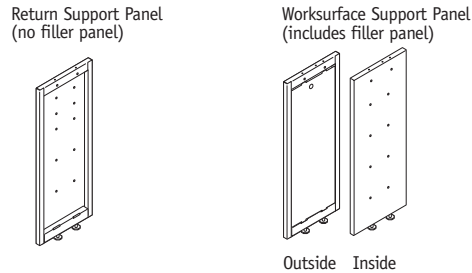

2

Worksurface support includes a filler panel. Remove filler panel by sliding up and out (Figure B).

Figure B

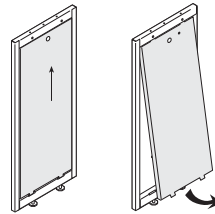

### FOR KNEESPACE MODESTY PANELS

3

If using with gusset bracket, secure gusset bracket to support panel prior to installing to worksurface (Figure C).

In using with modesty panel, secure modesty panel to support panel prior to installing to worksurface (Figure D).

Figure C


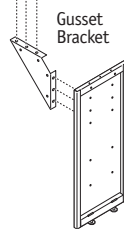


Figure D

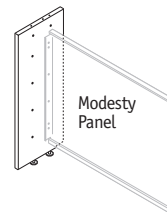


### FOR KNEESPACE MODESTY PANELS

4

To install directly to surface, secure using three (3) #10x1" screws provided (Figure E). Reinstall worksurface support panel filler, if applicable.

Figure E

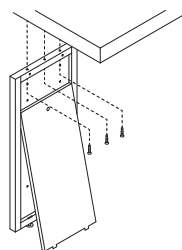

## WaveWorks® Metal Support Panel, Return Support Panel

### Recommended Tools

- Variable speed drill
- #2 Phillips tip bit
- Level

### Package Contents Qty.

- Support Panel per order
- #10x1" Phillips screws 3
- Sheet metal screws 6
- L Bracket 1

# NATIONAL

Furniture with Personality®

Telephone 800.482.1717  
Fax 812.482.8800  
www.nationalonline.com

Part # 2076617

Printed in U.S.A.  
© 2008 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service.

## ASSEMBLY INSTRUCTIONS


### WaveWorks® Metal Support Panel, Return Support Panel

#### FOR FULL OVERLAY MODESTY PANELS

5

To install directly to surface, secure using three (3) #10x1" screws provided (Figure F). Reinstall worksurface support panel filler, if applicable.


Figure F

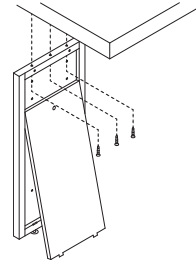

6

Align the support panel with the edge of the worksurface. **Note:** To eliminate the light gap align the support panels with the edge of the worksurface not with the edge of the modesty panel. Align the back side of the support panel to the back side of the adjacent support panel (Figure G).


Figure G

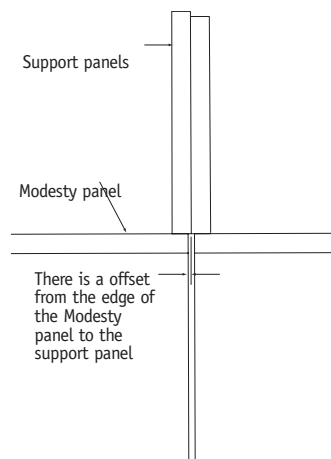

6

Attach the bottom of the support panel to the bottom of the modesty panel or end panel with the L bracket and Three (3) sheet metal screws (Figure H).

Figure H

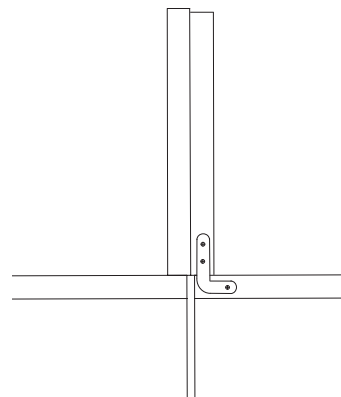

**Note:** There are no prebored holes the sheet metal screws are self drilling.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call Kimball Customer Care Teams.