


**1** Position the worksurfaces face down on a clean surface or floor. Align the outer edges of the two units. Install the ganging brackets. Lay both pieces of each ganging bracket on the bottom surface in the correct position and fasten each using the fourteen (14) #4.5 x 3/4" Hospa Screws provided.


**Figure A**

#4.5x3/4" Hospa Screw  
(7 required per bracket)

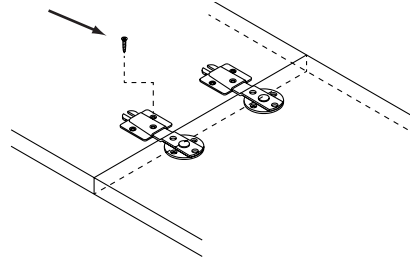

**2** To disattach two worksurfaces, pull the worksurfaces opposite each other until ganging bracket disengages. Pivot the arm bracket 90°.

**Figure B**

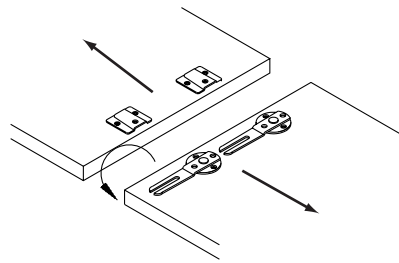

## Ganging Bracket

### Recommended Tools

- Pencil
- Drill
- Phillips Screw Bit

### Package Contents

	Qty.
• Ganging Brackets	2
• #4.5 x 3/4" Hospa Screws	14

**NATIONAL**

Furniture with Personality™

Telephone 800.482.1717  
Fax 812.482.8800  
[www.furniture.kimball.com/nof](http://www.furniture.kimball.com/nof)

Form #NAIGB-00  
#1475183

Printed in U.S.A  
© 2000 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Care Teams.