


## Assembly Instruction

- 1 Insert a screw into the hole of each loose Dual Lock™ pad. (Fig A)

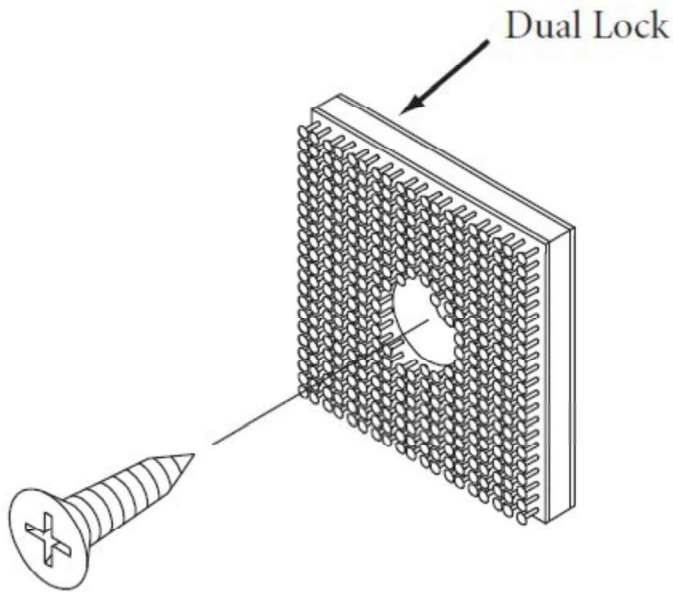

- 2 Press pads with screw protruding thru against the pads which are already mounted to the back of the tackboard. Position tackboard on mounting surface, making sure it is level. Apply pressure on board over pads to mark surface with screw points.

- 3 Carefully detach pads with small blade screwdriver and fasten in locations previously marked in step 2. Position tackboard against mounting surface, making sure it is level, and engage until each pair of pads are locked together.

### Reception Tackboards

#### Recommend Tools

- Drill/Screw Gun
- #2 Phillips Head Bit
- Level
- Small blade screwdriver

#### Hardware Required

- #8 x 5/8" Flathead screws
- Dual Lock Pads

**NATIONAL**

Furniture with Personality®

Telephone 800.482.1717  
Fax 812.482.8800  
[www.NationalOfficeFurniture.com](http://www.NationalOfficeFurniture.com)

Part #2552601  
Rev. -

Printed in U.S.A.  
© 2013 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.