

Assembly Instruction

Tessera Mounting Hardware

1

The bracket should be located 27 3/4" from the floor and be centered under where the eventual worksurface will be located. Bore four (4) 3/16" pilot holes through the mounting bracket into the wall panel. Attach the mounting bracket to the wall panel with four (4) #8 x 1" panhead screws or appropriate fastener based on surface.

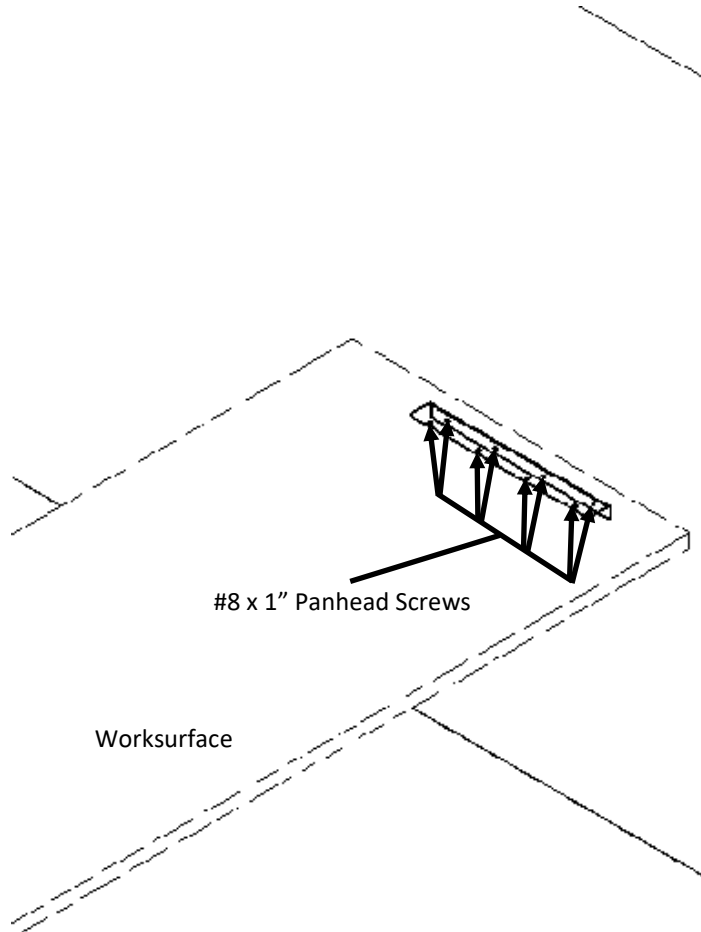


Figure A

2

The end of the worksurface should be flush to the wall panel and to attach the mounting bracket to the worksurface use four (4) #8 x 1" panhead screws.

Package Contents

Component.....	Qty
Mounting Bracket	1
#8 x1" Panhead Screw	8

Tools Required

Drill with 3/16" bit
Phillips Driver
Level

NATIONAL

Furniture with Personality*

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 2959892
Rev. -

Printed in U.S.A
© 2015 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.