


Fierce™ Assembly Instruction

1

Place mesh seat assembly upside down on an elevated flat surface. Position the right and left arm assemblies on the bottom of the seat as shown in Figure A. Note: To assure proper assembly of the right and left arms, each arm should angle toward the front of the seat, not rearward. Using the 5mm hex key wrench, secure each arm with (3) M6 X 30 hex head bolts as shown in Figure A.

Figure A

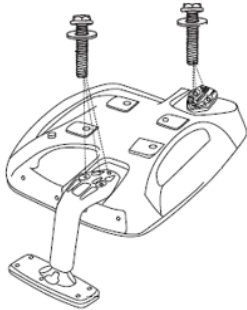

2

Position control mechanism on bottom side of mesh seat assembly to match the back 4-hole configuration. Using the 5mm hex key wrench, secure the control mechanism to the seat assembly using (4) M6 X 14 hex head bolts as shown in Figure B.

3

Position the mesh back assembly to the corresponding hole configuration on the back bottom of the control mechanism. Using the 5mm hex key wrench, secure the mesh back assembly with (3) M8 X 30 hex head bolts as shown in Figure C.

Figure B


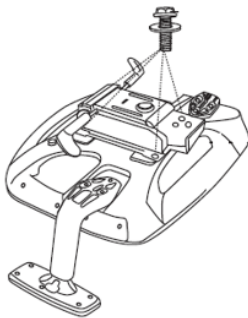


Figure C

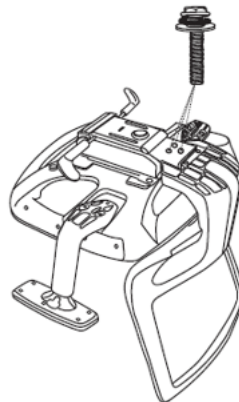

Assemble units as described herein only. All screws and bolts must be tightened securely and checked periodically after assembly. Failure to assemble or to secure parts properly may result in assembly failure and personal injury.

Product Line

Fierce™ Task Chair

Required Tools

- 5mm Hex Key (Included)

Package Contents

Qty.

- Back assembly 1
- Plastic base 1
- Gas lift cylinder 1
- Seat assembly 1
- Hardware Kit:
 - M6X14 hex head bolts 4
 - M6X30 hex head bolts 6
 - M8X30 hex head bolts 3
- Right arm assembly 1
- Left arm assembly 1
- Weight Balance Control Mechanism 1
- Set of 5 casters 1

NATIONAL

Telephone 800.482.1717
 Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 3216439

Rev. A


Printed in U.S.A.
 © 2020 Kimball International, Inc.

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

Fierce™ Assembly Instruction


4 Insert 5 casters into the plastic base as shown in Figure D.

Figure D

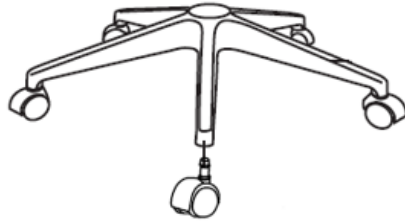


5 Orient the gas lift cylinder as shown and insert the larger end of the cylinder into the hole in the center of the base. Figure E.

Figure E

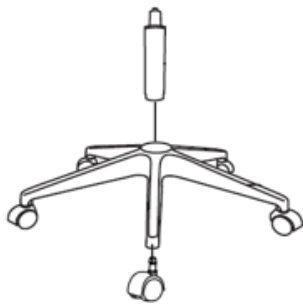

6 Carefully position the seat assembly over the gas lift cylinder, aligning the hole in the seat control with the top, smaller end of the cylinder. Press the seat assembly onto the cylinder then sit on the seat to completely mate the components together. While seated, actuate height control lever and remove weight from chair to adjust chair up to comfortable sitting height as shown in Figure F.

Figure F

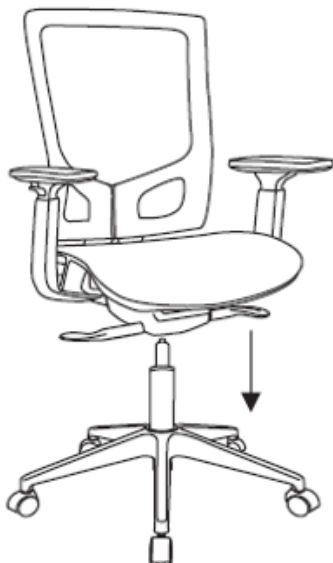

Proper product installation, in accordance with these instructions, is the responsibility of the installing agent. If you have any questions concerning these instructions, please call National Customer Service 800.482.1717.

NATIONAL

Telephone 800.482.1717
Fax 812.482.8800
www.NationalOfficeFurniture.com

Part # 3216439

Rev. A

Printed in U.S.A.
© 2020 Kimball International, Inc.