



A
4 PCS



B
4 PCS




C
1 PC

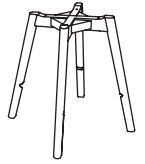

D
1 PC

STEP 01

ROTATE THE IRON FRAME ARC TO THE WOODEN FOOT SLOT. ATTACH BASE FRAME TO WOODEN FEET. SECURE WITH FOUR B SCREWS.

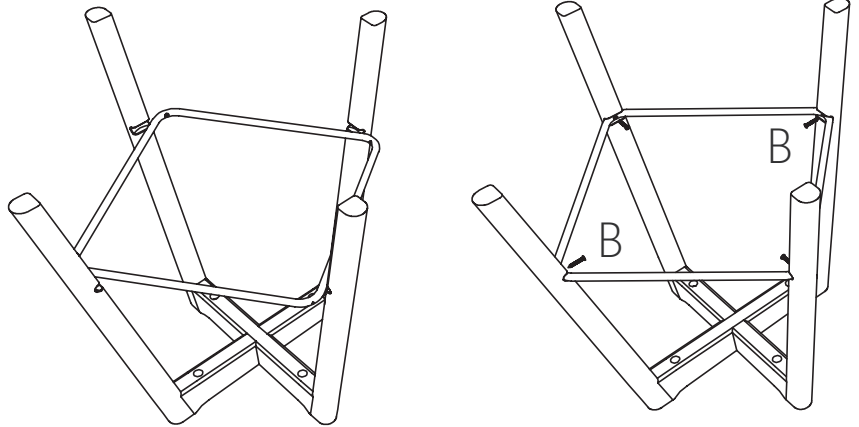

STEP 02

ATTACH WOODEN FEET TO SEAT CUSHION. SECURE WITH FOUR A SCREWS.

